




**COMPACT VENT-FREE
FIREPLACE SYSTEM**

- EN250TYLA-B
- EL250TYLA-B
- EN250TYLA-W
- EL250TYLA-W
- EN250TYLB-O
- EL250TYLB-O
- EN250TYLB-C
- EL250TYLB-C
- EN250TYLB-DO
- EL250TYLB-DO

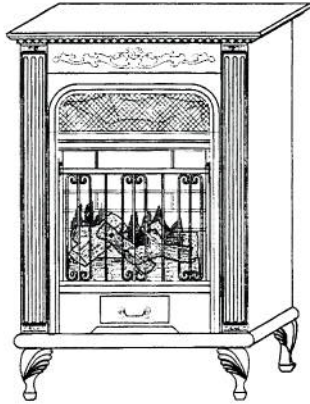

OWNER'S OPERATION AND INSTALLATION MANUAL

Table of Contents

Safety Information Warnings.....	2
Air for Combustion and Ventilation.....	4
Installation.....	6
Operating heater.....	9
Cleaning&Maintenance.....	10
Trouble Shooting.....	11
Specifications.....	13
Replacement Parts.....	14
Parts List.....	16
Installing the Heater.....	21
Installing Blower Accessory.....	22

⚠ WARNING: This is an unvented gas-fired heater. It uses air (oxygen) from the room in which it is installed. Provisions for adequate combustion and ventilation air must be provided. Refer to Air For Combustion and Ventilation section on page 4 of this manual.



CONTINENTAL APPLIANCE INC./U.S. OFFICE

5 Musick | 4600 Highlands Parkway S.E.
Irvine | Suite # D/E
CA 92618 | Smyrna, GA 30082
CUSTOMER CARE: 1-877-886-5989

⚠ WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or gas supplier.

⚠ WARNING: Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual for correct installation and operational procedures. For assistance or additional information consult a qualified installer, service agency or gas supplier.

This appliance may be installed in an aftermarket*, permanently located, manufactured (mobile) home, where not prohibited by local codes.

This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases.

WATER VAPOR:

ABY-PRODUCT OF UNVENTED ROOM HEATERS

Water vapor is a by-product of gas combustion. An unvented room heater produces approximately one (1) ounce (30ml) of water for every 1,000 BTU's (.3KW's) of gas input per hour. Refer to page 3.

Installer: Please leave these instructions with the consumer.

Consumer: Please retain these instructions for future use.

*Aftermarket: Completion of sale, not for purpose of resale, from the manufacturer.